

## Operation Manual for the PP Series 3AM-PP12V12W-1CH

### 1、Standard control mode：

The channel output is controlled by the knob. Adjust the knob will change output value.

### 2、External ON/OFF control：

- a. Channel ON/OFF is controlled by external ON/OFF control contact (SW).
- b. Input signal to contact of “SW” as following figure：


External contact “SW”	Input signal
(+)	Control pin
(-)	GND

The Control pin voltage of signal

Control signal	Output
DC 0V	ON <small>(note)</small>
DC 12V	OFF

Note：The output value is correspondent with knob

### c. CH1 output pin definition:

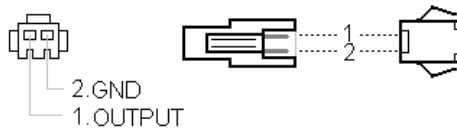

### 3、Dimension：

